# TECHALOGIC FHD 1080P

TEC10000 10'000mah Powerbank



# **User Manual**

Techalogic.co.uk




#### Specification

Capacity	5000mAh / 10000mAh	Input	5∨2A
Output1	5V 2.1A(Max)	Output2	5V 2.1A(Max)
Dimension	96.4x63.4x16.5mm / 96.4x63.4x24.5mm		


### **Product Features**

- Power indicator light
- ② Micro USB input
- ③ USB Output1
- 4 USB Output2
- ⑤ Power button

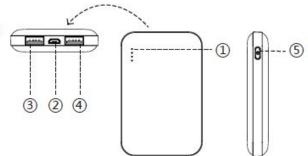

The mobile power supply is suitable for DC 5V input device charging, compatible with most cell phones and other devices.

#### Package Contents

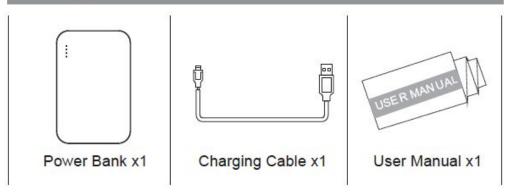

#### **Operating Instruction**

- 1.Charging power bank
- (1) Please use DC 5V charger and micro usb cable to charge the power bank.
- (2) When charging, the indicator light will flash. When full charged, all indicator lights will light up.



- 2. Charging device
- (1) Please use the proper connector to charge your device, It will start charging when you connect the cable.
- (2) The Indicator light will flash when charging.

When you press the power button or connect your device, All Indicator lights didn't light up, It shows the low battery capacity. Please charge the power bank.

#### Troubleshooting

- Press the power button, If only one indicator light is flashing, battery is running out soon, please recharge.
- 2. This power bank can automatically identify equipment that need to charge, If there is no equipment on it, the power bank will be turned off after 30 seconds.
- 3.If charging is not working properly, please try a different charging cable, since the connector may become loose due to wearing.
- 4.During charging, the device may become warm due to high currents and resistance, especially during wireless charging. To reduce temperature, avoid running intensive applications or using GPS on your mobile device when charging.



#### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- The power bank will generate heat when charging. Always charge in a well-ventilated and open-air area. Do not charge under pillows, blankets, clothing or on flammable surfaces.
- Keep the power bank away from heat sources, direct sunlight,
  combustible gas, humidity, water or other liquids.
- Do not disassemble, open, microwave, incinerate, paint or insert foreign objects into the power bank.
- Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy objects on the power bank.
- Do not short-circuit the power bank or store it in a receptacle where it may be short-circuited by other metallic or conductive objects.
- Do not operate the power bank if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury.
   Contact the dealer or authorized agent.
- Power bank usage by children should be supervised.





## Thank you for choosing Techalogic

If you have any questions regarding the operation of your camera, please don't hesitate to contact us and we will be more than happy to assist you.

